

WOODARD'S

CONCRETE PRODUCTS, INC.


629 Lybolt Road, Bullville, NY 10915
(845) 361-3471 / Fax 361-1050
Peekskill (914) 737-1074
www.woodardsconcrete.com

Flout Siphon Instruction Sheet

Made in the USA by:



Plan View

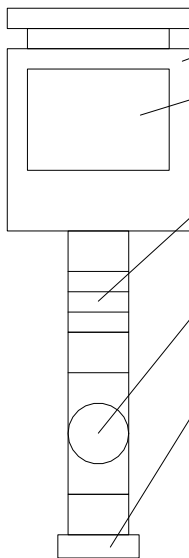

- Floating Outlet Chamber
- Outlet Hole with protective cover
- Flexible Rubber Coupler w/ s.s. band clamps
- 3" Overflow Outlet
- Schedule 35 Coupler cast into tank wall for 4" outlet pipe.

Installation:

1. Check labels on both the overflow pipe and the siphon to verify that the draw matches and that it is the correct one for your application.
2. Glue PVC Tee with overflow pipe to coupler in wall.
3. Clamp Rubber Coupler between tee & siphon.
4. Remove protective cover on siphon.
5. Fill tank to test.

Possible problems:

1. Water goes out overflow before siphon starts.
 - Siphon draw not matched properly to overflow pipe.
 - Protective cover not removed from siphon opening.
2. Siphon starts too soon; not allowing correct draw.
 - Check for debris inside the siphon
 - Make sure that the pipes clamped to the rubber coupler do not extend into the flexible ribbed area.

